LED WALL PACK - PHOTOCELL

أوبتيمال لايت
Optimal Light

MODEL # OPT-WP

PHOTOCELL INBUILT
IP 66
VOLTAGE: 100-277 AC
LIFE HOURS: 100,000
WARRANTY: FIVE YEARS



OPTIMAL LIGHT
WALL PACK 45-60W

Product Features
LED LUMILEDS 2835
Efficiency: 130 LM/W
Watt: 45 WATT - 60 WATT
LUMEN: 5850 LM - 7800 LM
Voltage: 100-277 VOLT
IP Rating: IP65 / IP66
Color Temp: 4000K
Dimming : No
Power Factor: ≥0.95
Bem Angle : 90°
THD: <15%
CRI: > 80
Length: 595 mm
BODY: ALUMINUM ADC 12




Photocell

Color Bronze
IK : 08
Dim: L316*W175*H152MM
Net Weight: 2.5 Kg.

LED WALL PACK - PHOTOCELL

أوبتيمال لايت
Optimal Light

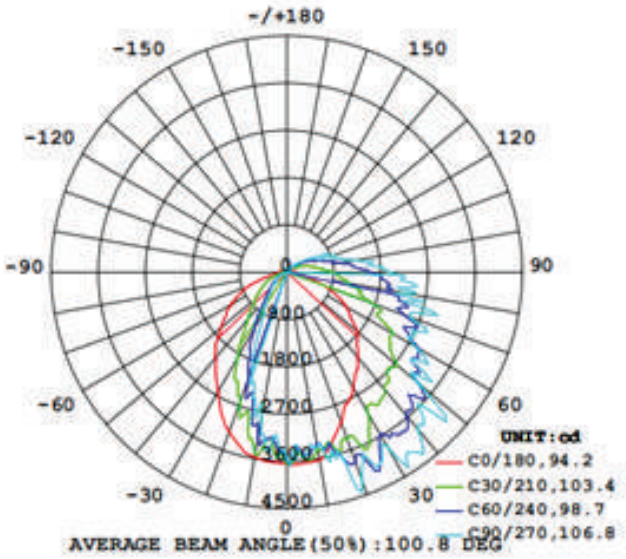

45 WATT- 5850 LM

60 WATT - 7800 LM




OPTIONS


PHOTOCELL

MOTION SENSOR

EMERGENCY BATTERY


POWER AND CCT CONTROLLER

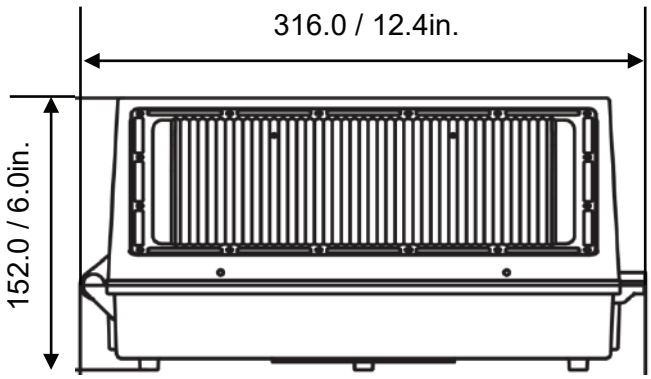

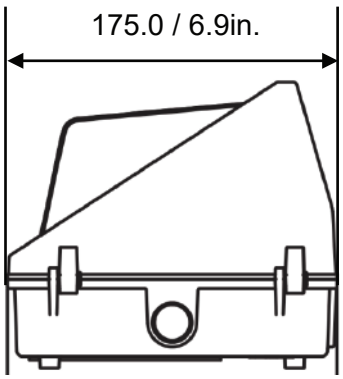


Size of box	330*200*170mm
SIZE of CTN	330*200*170 mm


STEP1: Use a screwdriver to unscrew the lamp screws And Remove the upper half of the fixture.

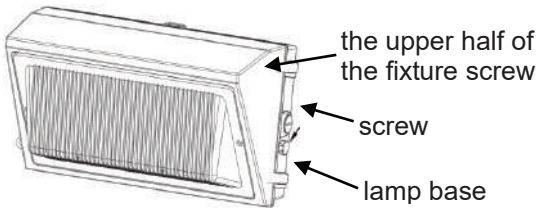


STEP2: Unscrew the cover of the entry hole on the lamp base and remove the cover.

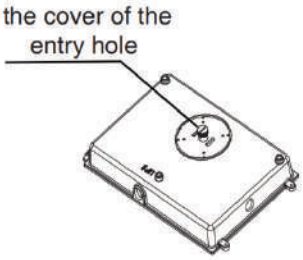


STEP3: According to the embedded terminal box,punch the correspongding mounting hole on the light's mount.

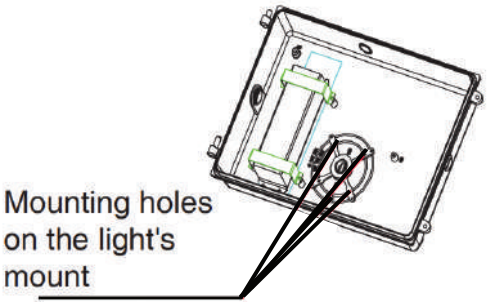


STEP4: Put the input line in the embedded box passes through the waterproof pad and then passes through the lamp base.

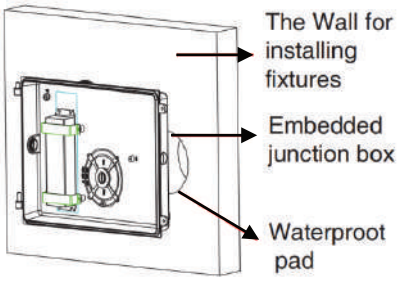


STEP5: Use screw to lock the lamp base on the embedded junction box.

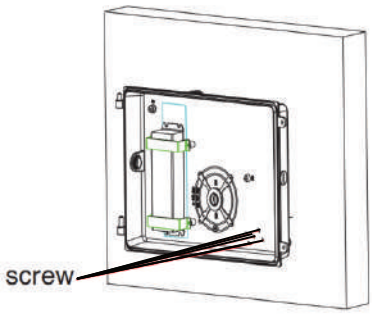

STEP6: Connect the input wire and the dimming wire of the light then put the connected wires into the embedded terminal box.

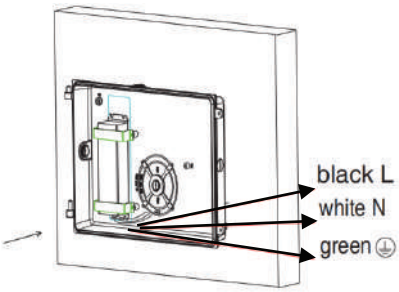

STEP7: Connect the output wires of driver with the wires of PCB board.

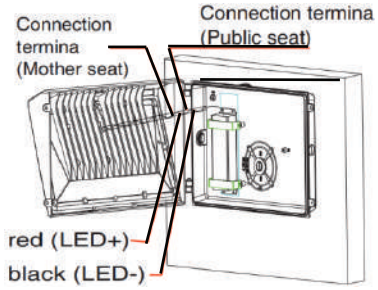

STEP8: Use screws to lock the fixture.Installation completed.

Tip:If the light sensor switch is not needed, attach the accessory(protective cap) to the light sensor to cover it.
Remove cap
First:Hold on the cap with your hand,Do not spin the cap.
Second:you can pull out the cap.

